

Owner's Manual

Battery Powered Crimping Tool E-PEW 12



Table of Contents

1	Intended use	3
2	Safety instructions	3
3	Terminology used	6
4	Specifications on the Identification Plate	6
5	Scope of delivery	7
6	Technical specifications	7
7	Brief description of the crimping tool	8
8	First use and operation	11
9	Cleaning, maintenance and repair	16
10	Disposal	18
11	Warranty	18
12	Declarations of Conformity	19

Rennsteig Werkzeuge GmbH

An der Koppel 1
98587 Steinbach-Hallenberg
Germany

Tel.: +49 (0) 36847 / 4 41-0
Fax: +49 (0) 36847 / 4 41-14
E-mail: info@rennsteig.com

www.rennsteig.com

1 Intended use

The crimping tools are designed exclusively for use with die sets that are either distributed by RENNSTEIG or which RENNSTEIG has declared as being compatible.

The tools and the die sets must be used solely for the purpose as envisaged by RENNSTEIG. The tool is not intended for use in different or more specialised applications.

Any work performed with this tool that is not in line with its intended use can cause damage to the crimp tool, its accessories and the crimp contacts.

RENNSTEIG accepts no liability for losses resulting from

- the use of unsuitable crimping tools or crimping tools from other manufacturers;
- or
- the use of the tool in applications that are outside the scope of the tool's intended use.

Using the tool "as intended" also implies following the Owner's Manual, performing inspections and maintenance work as instructed and compliance with all applicable safety provisions in their latest published version.

2. Safety instructions

2.1 Explanations of symbols

Icons are used to mark sections of text as described below. Ensure you follow these instructions and take especial care in such situations. Also provide other users and technicians with a full set of health and safety instructions!

**WARNING!**

This section warns the reader about a potentially dangerous situation that can lead to death or serious physical injury.

**CAUTION!**

This section cautions the reader about a potentially dangerous situation that can lead to minor or moderate physical injury and/or damage to property.

**REMARK!**

The information in this section is of particular relevance to the description of a function or an operating procedure.

2.2 General safety instructions

**WARNING!**

To avoid possible loss or damage, read all of the safety and other instructions, illustrations and technical specifications provided with this electrical tool.

Workplace safety

- Keep your workplace clean and well lit.
- Do not work with the electrical tool in explosion hazard areas in which combustible liquids, gases or dusts are present.
- Keep children and other persons away from the electrical tool while it is being used.

Electrical safety

- The connector plug on the electrical tool must fit in the socket. This plug must not be altered in any way. Do not use any adapter plugs in conjunction with electrical tools that have a safety earth.
- Avoid physical contact with earthed surfaces such as piping, radiators, heaters, stoves and refrigerators.
- Keep electrical tools away from rain or wet conditions.
- Do not misuse the connection cable to carry or hang up the electrical tool, and/or to pull the plug out of the power socket. Keep the connection cable away from heat, oil, sharp edges or any parts capable of movement.
- If you are working with the electrical tool outside, always use extension cables that are designed for outdoor use.
- If the use of the tool in a damp environment is unavoidable, always use a residual-current device (RCD)!

Safety of personnel

- Be alert and aware of what you are doing, and always take care when working with an electrical tool. Do not use an electrical tool if you are tired or under the influence of drugs, alcohol or medicines.
- Always wear personal protective equipment (PPE) and safety glasses.
- Avoid accidental start-up of the tool. Check to make sure that the electrical tool is switched off before you pick it up, carry it somewhere or connect it to a power supply.
- Remove any setting tools or spanners before switching on the electrical tool.
- Avoid any awkward bodily posture when using the tool. Make sure you have a stable stance and keep your balance at all times.
- Always follow the safety rules at all times, even if you have used the tool many times before.
- Do not let yourself get lulled into a false sense of security and never skip or ignore any of the safety instructions for electrical tools, even if you are very familiar with using the tool.

Use and handling of the tool

- Do not overload the electrical tool!
- Do not use any electrical tool that is faulty
- Always take the plug out of the socket before changing any device settings, swapping out tool attachments or setting the tool to one side.
- When not in use, store electrical tools out of the reach of children.
- Do not let electrical tools be used by anyone who is unfamiliar with how they should be used or who has not read these instructions.
- Take good care of the electrical tool and its tool attachments. Check to make sure that moving parts are working properly and do not jam, look to see if any parts are broken or damaged, and could impair the proper function of the tool. Have any damaged parts repaired before starting to use the electrical tool.
- Always use the electrical tool according to these instructions. Take note of the required working conditions and the activity to be performed.
- Keep the handles and handle surfaces dry, clean and free from oil or grease.

Service

- Always have your electrical tool repaired by qualified personnel, using original replacement parts.

2.3 Special safety instructions

Read this Owner's Manual carefully!

Follow all safety instructions as provided!

Ensure compliance with national safety standards!



WARNING!

Read all safety warnings and all instructions!

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

Accordingly: Ensure that you retain all safety instructions and guidelines for future use and always include these when passing the equipment on to others.



WARNING!

Danger of injury from airborne fragments!

If the tool is used incorrectly, or if worn or damaged die sets and crimping tools are used, the operator risks injury from airborne fragments.

Accordingly:

- Crimping tools must be used solely by qualified personnel.
- Maintenance must be performed at the required intervals.
- Before each use, inspect the crimping tools and die sets for cracks and other signs of wear.
- Crimping tools and die sets with material flaws or other signs of wear must be taken out of service immediately and no longer used.
- Only use crimping tools and die sets if they are in perfect working order.
- If crimping tools or die sets have been used incorrectly, they must be removed from service and inspected by an authorised service centre.



CAUTION!

Damage to/malfunctioning of the crimping tool and die set as a result of improper handling!

Accordingly:

- Do not continue to use worn crimping tools – replace them immediately.
- For transportation and storage, use the carrying case and store the crimping tools and die sets in a dry place.
- Ensure all damage is inspected without delay by an authorised service centre.
- Observe the safety instructions for detergents and corrosion protection agents used.




REMARK!


For working and installation instructions for crimp contacts, consult the documents as supplied by the manufacturer.






3 Terminology used

V	Volt	Ah	Amp-hour	∅	Diameter
A	Ampere	db(A)	Decibel (sound pressure)	h	Hour
Hz	Hertz	bar	Bar	min	Minute
W	Watt	°C	Degrees Celsius	s	Second
kW	Kilowatt	kN	Kilonewton	m/s ²	Metres per second squared (acceleration)
g	Gram	AC	Alternating current	No.	Number
kg	Kilogram	DC	Direct current		
Bj	Year of manufacture	F	Force		

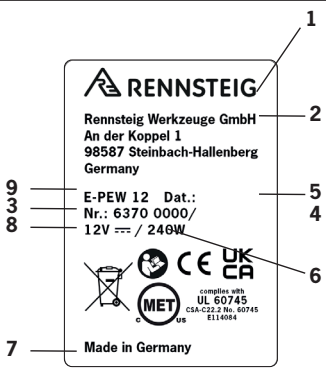4 Specifications on the Identification Plate

Symbol	Meaning
	Maintenance sticker, with date of next service. Located in the battery compartment. To read the sticker, pull out the battery.

Specifications on the Identification Plate		
	1	Manufacturer Logo
	2	Manufacturer address
	3	Item Number
	4	Serial Number
	5	Year of Built mm.yy
	6	Power Consumption
	7	Country of Manufacturing
	8	Permissible Voltage Range in Volt
	9	Type Description of Device

Explanation of Possible Pictograms on the Identification Plate			
	Electrical appliances must not be disposed of with household waste. See chapter Disposal for more information.		UKCA Conformity Marking Product Safety in UK
			CE-Conformity Marking; Product Safety in Europe
	Test Mark for Canada and USA		Read Owner's Manual

5 Scope of delivery

The standard scope of delivery includes:

- E-PEW 12 crimping tool, incl. Operating Manual
- Charger, incl. operating instructions
- 12 V DC battery, 2.0 Ah
- Safety instructions
- Carrying case

Information about other accessories – such as die sets, positioning guides (locators), wire stops, etc. – can be obtained online at www.rennsteig.com online or from your dealer.

6 Technical specifications

Rated voltage / battery	12 V DC (lithium-ion) / 2.0 Ah / 4.0 Ah
Power consumption	240 W
Height	Approx. 142 mm
Length	Approx. 274 mm with 2.0 Ah battery; approx. 300 mm with 4.0 Ah battery
Width	Approx. 50 mm
Net weight	Approx. 2.0 kg (with 2.0 Ah battery)
Crimping area	Conductor inner cross-section: 0.08 mm ² to 50 mm ²
Max. sound power level	83 db(A) (measurement uncertainty 3 db(A))
Sound pressure level at operator ear	70 db(A) (measurement uncertainty 3 db(A))
Vibration level	<2.5 m/s ² (measurement uncertainty 1.5 m/s ²)
Protection class	IP20
Operating temperature range	-10 °C to +50 °C

The vibration emission figure stated has been measured using a standard test procedure and can be utilised when making comparisons with other equipment.

The figure can also be used for an initial estimation of exposure levels.

Attention: During actual use of the equipment, the vibration emission figure can differ to the value stated, depending on the specific application for which the equipment is being used. Depending on the actual operations conditions experience (exposure while working), it may be necessary to draw up safety precautions for operating personnel.

For information about charger operation and functionality, please consult the operating instructions enclosed for the charger.

7 Brief description of the crimping tool

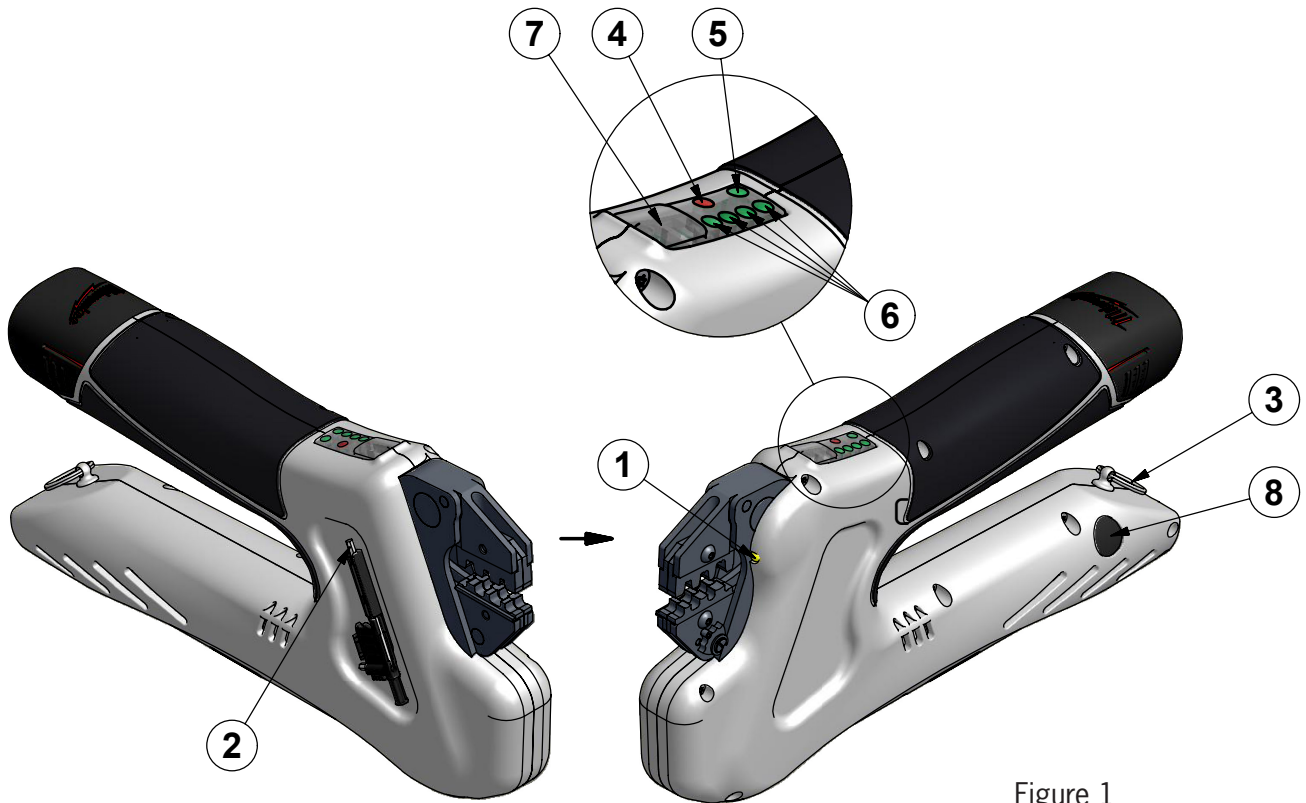


Figure 1

LED (1)

The LED (1) illuminates the crimp position. This LED lights up when the crimping tool is ready for use.

Allen key (2)

An Allen key (2) is required for changing the die sets. This key is clipped to the crimping tool. The key (2) is removed for use and then pressed back into the clip holder.

Key ring (3)

The crimping tool is equipped with a key ring (3) to which a carry strap can be attached.

Red LED (4)

LED is illuminated or flashes (Cause see 8.2)

Green LED (5)

LED is illuminated or flashes (Cause see 8.2)

Green LEDs (6)

LEDs are illuminated (Cause see 8.2)

Start button (7)

Reset button (8)

7.1 Operation

To switch on the crimping tool, press the Start button (7).
Press and hold the Start button (7) to close the jaws of the crimping tool.
If the Start button (7) is released, the tool halts immediately at its current position.
When the tool reaches its final position and finishes crimping, the jaws automatically open again.

7.2 Reset button

Pressing the Reset button (8) cancels the crimping operation and switches off the crimping tool.

7.2.1 Cancelling a crimping operation

- The crimping operation can be interrupted by releasing the Start button (7). This will halt the tool at its current position.
- To re-open the tool, briefly press the Reset button (8).
- The tool returns to its starting position.

7.2.2 Switching off the crimping tool

- Press and hold the Reset button (8).
 - All LEDs go out and the crimping tool switches itself off.
- or
- The tool switches itself off automatically if not used for approx. 5 min.
-

7.3 Battery

**REMARK!**

The batteries are not charged at the factory.
Accordingly: Charge the battery before first using the tool!

**REMARK!**

Specific temperatures apply to charging performance and battery storage.
Accordingly: Ensure you follow the charger's operating instructions!

Removing the battery (Figure 2)

Depress (1) both unlocking buttons (A) and then pull out the battery (2).

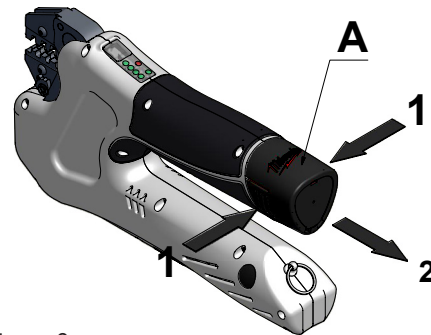


Figure 2

Inserting the battery (Figure 3)

Push the battery into the tool as shown until it locks into place.

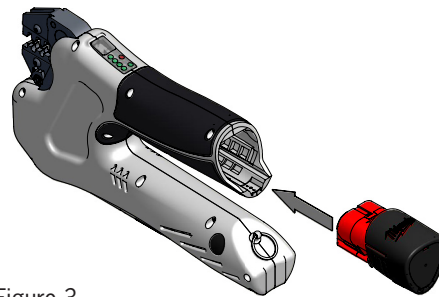


Figure 3

Battery status indicator

The 4 green LEDs (6) show the battery's charge level. The number of LEDs illuminated indicates the charge level. If the LED (5) flashes, the battery is empty and crimping is not possible.

7.4 E-PEW 12 battery usage



REMARK!

The E-PEW 12 crimping tool must be powered by a 12 V lithium-ion rechargeable battery.




Behaviour of the crimping tool after prolonged non-use or on battery change

The crimping tool switches itself off if it is not used for a while or if its battery is removed. No LED is illuminated. To switch on the crimping tool, press the Start button (7).

Behaviour of the crimping tool when battery is empty

If the green LED (5) flashes, the battery is empty and crimping is not possible. The battery must be recharged.

8 First use and operation

	<p>WARNING ! Do not work with the crimping tool at live wires! Always verify the workpiece is not energized.</p>
	<p>CAUTION! Finger crush hazard when operating the tool without crimping die sets! (Figure 4)</p>
	<p>REMARK! The crimping tool is not intended as a replacement for a stationary crimping machine.</p>

Without a die set inserted, the operator's fingers can slip between the jaws of the tool. Starting the tool would then crush the operator's fingers.

Accordingly: Never operate the tool without a die set.
Keep fingers out of the jaws of the tool.

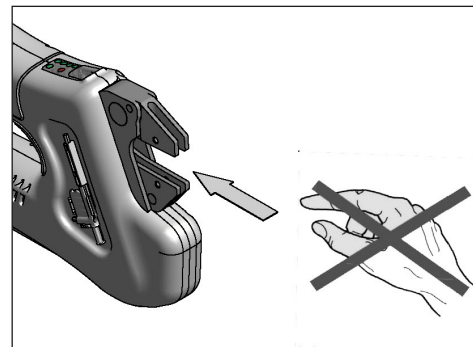



Figure 4

	<p>CAUTION! Risk of damaging the crimping tool and the die sets!</p>
---	---

The crimping tool and the die sets can be damaged by

- assembling non-matched upper and lower die set parts together; and by
- failing to assemble the die set parts properly.

Accordingly: Ensure that you only assemble and fit matching die set parts.
Ensure that you orient the die set parts properly when fitting them.

8.1 Preparing the E-PEW 12

8.1.1 Fitting die sets without additional positioning guides, e.g. for insulated/non-insulated cable connectors, through and coax connectors, wire-end sleeves, RJ plugs, etc. (Figure 5, 6)

1. Select the crimping die set as appropriate (e.g. insulated connectors or wire-end sleeves) and take care to use the adequate screws (M4x11).
2. Push the closed crimping die set – as shown in Figure 5 – into the socket on the die until the lower piece of the die set can be loosely screwed into place by means of the M4x10 screw.
3. Press the Start button on the crimping tool briefly to close it so the upper part of the die set can be tightened with the M4x11 screw (figure 6).
4. Now tighten both screws.

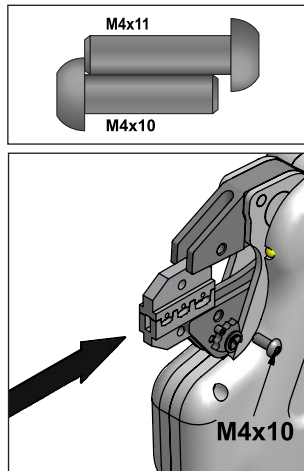


Figure 5

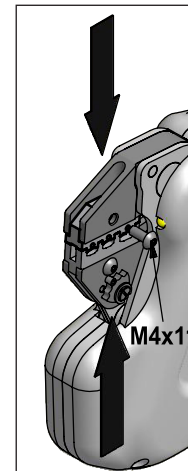


Figure 6

8.1.2 Fitting die sets with additional positioning guides

8.1.2.1 Examples: non-insulated open plug connectors, D-sub plugs, etc. (Figure 7)

A positioning guide can be used to position the connectors. For use without a positioning guide, assemble as shown in Section 8.1.1.

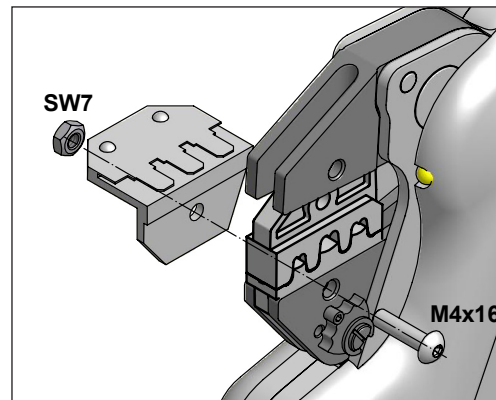


Figure 7

1. Select the crimping die set as appropriate (e.g. non-insulated blade connectors, D-sub plugs, etc.) and take care to use the adequate screws.
2. Push the closed crimping die set – as shown in Figure 5 – into the socket on the die until the lower piece of the die set can be loosely screwed into place using the M4x16 screw.
3. Press the Start button on the crimping tool briefly to close it so the upper part of the die set can be tightened with the M4x11 screw (figure 6).
4. Now tighten both screws.
5. Push the positioning guide onto the M4x16 screw as shown in Figure 7 and secure using the nut (SW 7).

8.1.2.2 Example for rotated contacts (Figure 8, 9)

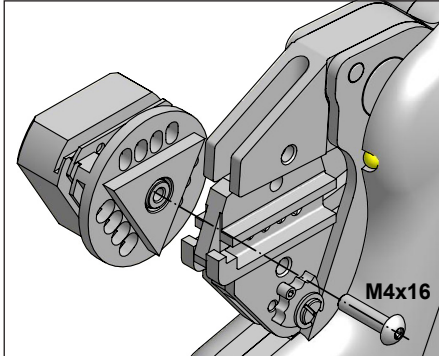


Figure 8

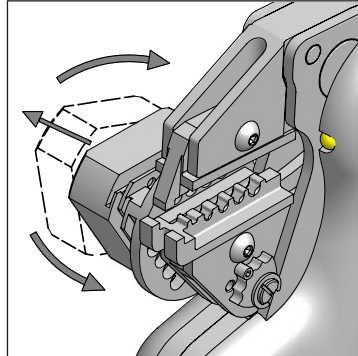


Figure 9

A positioning guide can be used to position the connectors. For use without a positioning guide, assemble as shown in Section 8.1.1.


1. Select the crimping die set as appropriate.
2. Push the closed crimping die set – as shown in Figure 5 – into the socket on the die until the lower piece of the die set can be loosely screwed into place using the M4x16 screw.
3. Press the Start button on the crimping tool briefly to close it so the upper part of the die set can be tightened with the M4x11 screw (figure 6).
4. Now tighten both screws.
5. Place the positioning guide onto the M4x16 screw as shown in Figure 8 and secure using the thread contained in the locator. (Figure 9)

8.2 LED display meanings (see Figure 1)

LED display	Status/cause	Action
No LEDs illuminated	The tool is switched off.	Press the Start button (see Section 7.4).
Green LED (5) is illuminated	The tool is ready for use.	
Green LED (5) not illuminated (jaws opening)	The crimping tool is returning automatically to its starting position.	
Green LED (5) flashes	Battery charge level insufficient.	Recharge or replace the battery.
Green LEDs (6)	Battery charge level indicator	

LED display	Status/cause	Action
Red LED (4) is flashing	Tool outside operating temperature range	The tool's operating temperature range is -10 °C to +50 °C: if the red LED is flashing, the tool must be moved to a warmer/cooler environment.
Red LED (4) is illuminated	The crimping tool has not returned to its starting position after switching off.	Press the Reset button (8). The crimping tool returns to its starting position.
Red LED (4) is illuminated	An excessive level of power draw has been detected – overcurrent protection	Check the combination of die sets/crimp contacts. Clean crimping tool as required. If the fault persists, return the crimping tool to a service centre.
Red (4) and green (5) LEDs are flashing alternately	Maintenance interval of 25,000 operations reached.	Return the crimping tool for service.
Red LED (4) illuminated and all other LEDs flashing	Tool malfunction	Return the crimping tool to a service centre.

8.3 Crimping

	<p>CAUTION! There is a risk of crush injuries to fingers and hands! Accordingly: During crimping, keep all parts of the body and other objects away from the die set jaws.</p>
---	---

8.3.1 Die sets for insulated/non-insulated cable connectors, through and coax connectors, wire-end sleeves, RJ plugs (Figure 10)

1. Check that the connector parameters match those for the crimping die set.
2. Insert the connector into the die set as appropriate for its cross-section.
3. Press the Start button briefly, so as to close the die set far enough to hold the connector straight.
4. Insert a stripped cable into the connector.
5. Press the Start button and keep it pressed until crimping is complete.
6. After crimping has finished, remove the connector from the crimping tool.

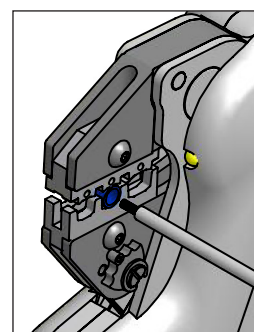


Figure 10

8.3.2 Die sets for non-insulated open plug connectors, D-sub plugs (Figure 11)

1. Check that the connector parameters match those for the crimping die set.
2. Insert the connector into the die set and positioning guide as appropriate for its cross-section.
3. Insert a stripped cable into the connector.
4. Press the Start button and keep it pressed until crimping is complete.
5. After crimping has finished, remove the connector from the crimping tool.

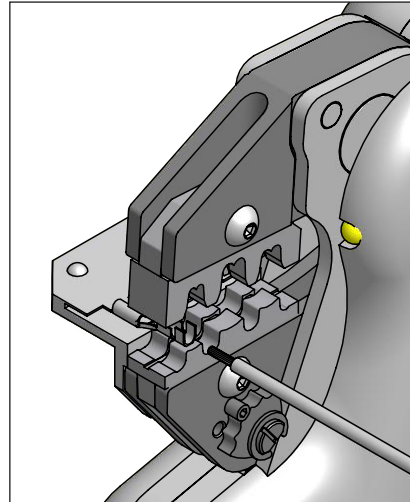


Figure 11

8.3.3 Die sets for rotated contacts (Figure 12, 13)

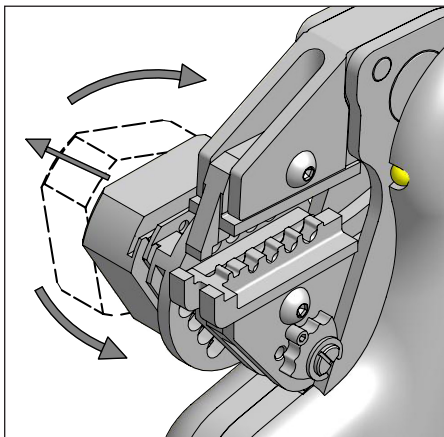


Figure 12

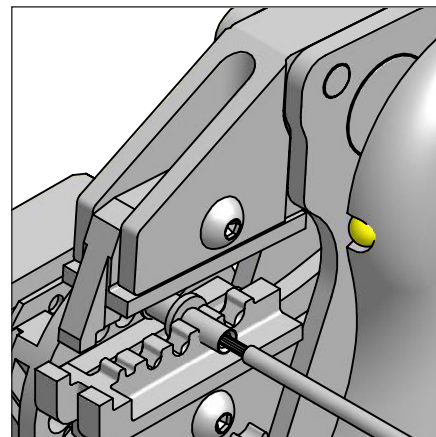



Figure 13

1. Check that the connector parameters match those for the crimping die set.
2. If required, pull out the positioning guide and rotate it in order to position it correctly. (Figure 12)
3. Insert the connector into the die set and positioning guide as appropriate for its cross-section.
4. Insert a stripped cable into the connector.
5. Press the Start button and keep it pressed until crimping is complete.
6. After crimping has finished, remove the connector from the crimping tool.

9 Cleaning, maintenance and repair

	<p>CAUTION! Danger of injury during cleaning or repair by accidentally pressing buttons on the tool! Accordingly: Follow safety instructions during cleaning, maintenance or repair work and always remove the battery beforehand. Mechanical metal components must be treated with a suitable preservative agent on the regular basis in order to ensure a proper corrosion protection.</p>
---	--

Maintenance intervals

All maintenance and repair work must always be performed by RENNSTEIG or by a service centre authorised by RENNSTEIG.

Cycles display within a service interval


With the crimping tool switched off, you can check the number of cycles remaining before the next service by completing the steps as given below:

- Press and hold the Reset button (8) (Fig.1).
- Then press and hold the Start button (7) (fig.1).
- As soon as LED (4) and (5) (fig.1) are flashing simultaneously, release both buttons. The mode “service display” is active.
- The four green LED lights (6) (fig.1) show the remaining cycle time (crimp operations) until next service is due (see table below).
- To exit service display mode, press the Reset key (8) or the Start key (7) (Figure 1).

Display (LED 6) Figure 1	Number of cycles remaining
All 4 battery LEDs illuminated	25,000 to 20,000 crimp operations
Bottom 3 battery LEDs illuminated	20,000 to 15,000 crimp operations
Bottom 2 battery LEDs illuminated	15,000 to 10,000 crimp operations
Bottom 1 battery LED illuminated	10,000 to 5,000 crimp operations
No battery LEDs illuminated	5,000 to 500 crimp operations
All 4 battery LEDs flashing	500 to 0 crimp operations

Service addresses

Addresses of authorised service centres can be obtained from your manufacturer or from www.rennsteig.com.

	<p>REMARK! The next service due is specified by an inspection label placed on the crimping tool. This service must be performed at least once every 2 years or at the point in time indicated by the LED display (see Section 8.2, “LED display meanings”).</p>
---	---

Carry out maintenance and repair work regularly (before use, at the start of the working day) or if the tool becomes soiled. (Figure 14)

Inspect the tool for visible exterior damage, material faults and other signs of wear. If you find defects, discontinue using the tool and send it in for repairs.

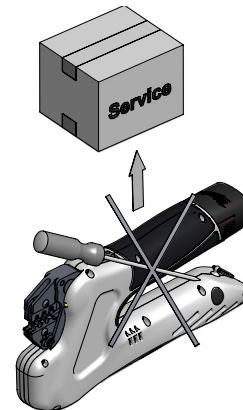


Figure 14

Setting the crimp height (Figure 15)



REMARK!

The crimp height should be checked regularly by qualified personnel from quality control and recalibrated as required using the method described below.



CAUTION!

Adjustment of crimp height to be done only when the tool is completely opened (i.e. in the lower final position fig. 15) and the battery is unplugged. Never actuate the tool with unsecured adjusting disc (e.g. missing screw (A), fig.15).

To avoid damage to the tool and crimping die sets, please ensure that the adjusting disc is only rotated step-wise by a half-notch each time. This is achieved by repositioning the screw (A) in the next free threaded hole to secure the adjusting disc in place.

If the results of crimping do not meet the specifications set by the connector manufacturer (crimp height, extraction force), this may have the following causes:

Normal usage of the tool has resulted in wear:

the crimping force can be recalibrated.

Crimping die set worn:

to avoid damage, the crimping die set must be replaced.

1. Disengage screw (A).
2. Turn the adjusting disc (B) a half-notch.
 - Turn clockwise -> results in a higher crimping force and a reduced crimping height.
 - Turn anti-clockwise -> results in a lower crimping force and therefore an increased crimping height.
3. Insert screw (A) into the other threaded hole and tighten.

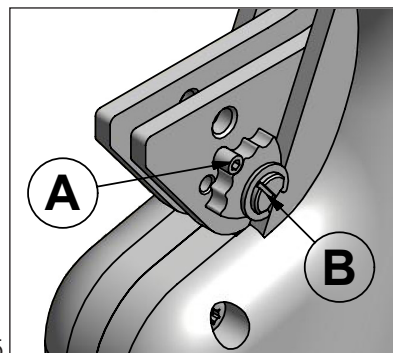


Figure 15

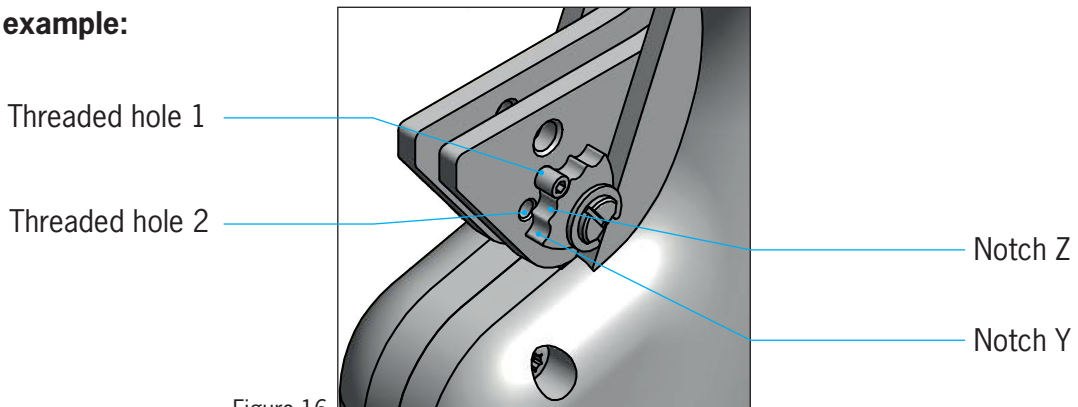
Tool setting example:


Figure 16

1. Before adjustment, the crimping dies of the crimping tool must be fully open (home position)
2. Remove screw (A) from the threaded hole (1).
3. Turn the adjusting disc a half-notch.
 - Notch (Y) over threaded hole (2) = rotate clockwise
 - Notch (Z) over threaded hole (2) = rotate anti-clockwise
4. Insert screw (A) into threaded hole (2) and tighten.

In the state as shown, no other notch-hole combinations are permitted, since the change to the crimping dimensions and/or force would be much too great. This could result in damage to the tool and the crimping die sets.

10 Disposal

For the disposal of batteries and charger, the instructions in the enclosed owner's manual need to be complied with.

	<p>ATTENTION! The product, charger and batteries must not be disposed of as residual waste. RENNSTEIG recommends that disposal be carried out by authorised specialist companies. Alternatively, waste devices can be returned directly to RENNSTEIG (or a specialist workshop) for proper disposal. National disposal guidelines must be observed.</p>
---	---

11 Warranty

Apart from the German statutory product warranty, RENNSTEIG grants a guarantee of 24 months or 4 maintenance cycles for these crimping tools (whichever occurs first). The guarantee period always commences at the time of delivery; in cases of doubt, proof of purchase documentation must be shown.

Within the guarantee period, rectification of all damage or faults affecting the tools are covered, where such damage or faults are traceable to material or manufacturing defects.

Issues, not covered by the guarantee:

- Damage caused by improper use or inadequate maintenance.
- Damage caused by the application of products that RENNSTEIG has not approved for use with its crimping tools.
- Damage caused by the crimping of unsuitable cables or connectors.

No guarantee is granted by RENNSTEIG for wear parts.

While services rendered under the terms of guarantee, are free of charge, the owner of the equipment must bear the costs of carriage in both directions.

Complaints will be recognised only if the equipment is returned in its fully-assembled state to RENNSTEIG or an authorised service centre.

Any repair or exchange of the equipment conducted under the terms of guarantee does not extend the guarantee period. Repair or exchange always involves the supply of as-new parts, whose function matches that of the old parts. All defective – and therefore replaced – parts are the property of the manufacturer.

12 Declarations of Conformity

12.1 EC/EU Declaration of Conformity

EC/EU Declaration of Conformity and list of the observed directives and the applicable standards: see supplement EC/EU Declaration of Conformity.

12.2 UK Declaration of Conformity

UK Declaration of Conformity and list of the observed directives and the applicable standards: see last page of the supplement UK Declaration of Conformity.
